

OVHT	PRESS	ENTRY DOORS	INOP	FIRE	L ENG OIL PRESS	DC FAIL	DUCT LEAK
OVHT	PRESS	EMER DOORS	INOP	CONFIG	R ENG OIL PRESS	DC FAIL	BUS OFF
OVHT	PRESS	CARGO DOORS	INOP	A/P DISC	ENG VALVE	DC FAIL	BUS OFF
OVHT	PRESS	ACCESS DOORS	INOP	WINDSHEAR	SPAR VALVE	DC FAIL	BUS OFF
OVHT	ON DC	CAPT PITOT	INOP	PULL UP	ENG VALVE	ICE DET	MAIN BAT DISCH
OVHT	ON DC	L AUX PITOT	PARK BRAKE	SPEED BRAKES	SPAR VALVE	ICING	APU BAT DISCH
OVHT	ON DC	FO PITOT	PARK BRAKE	CABIN ALT	REV ISLN	SMOKE	FUEL CONFIG
OVHT	ON DC	L AOA	PARK BRAKE	OVSPD	PARK BRAKE	TAIL SKID	DUCT LEAK
OVHT	ALIGN	R AOA	PARK BRAKE	ALT ALERT	AUTO BRAKES	NOSE	SYS PRESS
QTY	ALIGN	R AUX PITOT	VALVE	AUTO PILOT	BRAKE TEMP	RIGHT	AIL LOCK
QTY	ALIGN	TAT	VALVE	GND	WHL WELL FIRE	LEFT	UNARMED
QTY	ALIGN	AUTO	VALVE	A/T DISC	LEADING EDGE	CABIN ALTITUDE	RUN
QTY	FAULT	STAB TRIM	VALVE	FMC	TRAILING EDGE	NO COOLING	ON ON
OVHT	FAULT	SPOILERS	VALVE	PROX G/S IN HIB	BRAKE SOURCE	VIDEO ON	INOP ON
OVHT	FAULT	AUTO SPDBRK	VALVE	INNER/AIRWAYS	L ENG OVHT	ISLN	ON ON
AUTO	FAULT	TIRE PRESS	VALVE	MIDDLE	R ENG OVHT	ISLN	TAIL SKID
INNER/AIRWAYS	SYS PRESS	UNCHED STAB TRIM	VALVE	OUTER	ENG BTL 1 DISCH	BLEED	NOSE
MIDDLE	SYS PRESS	RUDDER RATIO	FAULT	_____	ENG BTL 2 DISCH	BLEED	RIGHT
OUTER	SYS PRESS	ANTI SKID	FAULT	_____	APU BTL DISCH	FAULT	LEFT

WARNING
CAUTION

WARNING
CAUTION

WARNING
CAUTION

ALTN

ALTN

ALTN

RUN
FAULT

ARMED

FWD

ARMED

AFT

DISCH

ON

PRESS
UNLKD

LKD
UNLKD

RUN
FAULT

FAIL
P-RESET

AUTO
ISLN

AUTO
ISLN

INOP
PACK
OFF

INOP
PACK
OFF

Ⓞ
VALVE

Ⓞ
VALVE

Ⓞ
VALVE

DISARM
DISARMED

AUTO INOP
UNARMED

D
L
E
A
K
D
U
C
T

D
L
E
A
K
D
U
C
T

O
F
F

O
F
F

F
A
U
L
T

F
A
U
L
T

DISCH
↕
APU

D
O
O
R
S

G
E
A
R

D
O
O
R
S

G
E
A
R

DISCH
1 ← 2

DISCH
1 ← 2

D
S
P
Y
F
A
I
L

M
S
G
O
F
S
T

D
S
P
Y
F
A
I
L

M
S
G
O
F
S
T

M
S
G
O
F
S
T

D
S
P
Y
F
A
I
L

L
E
F
T

R
I
G
H
T